


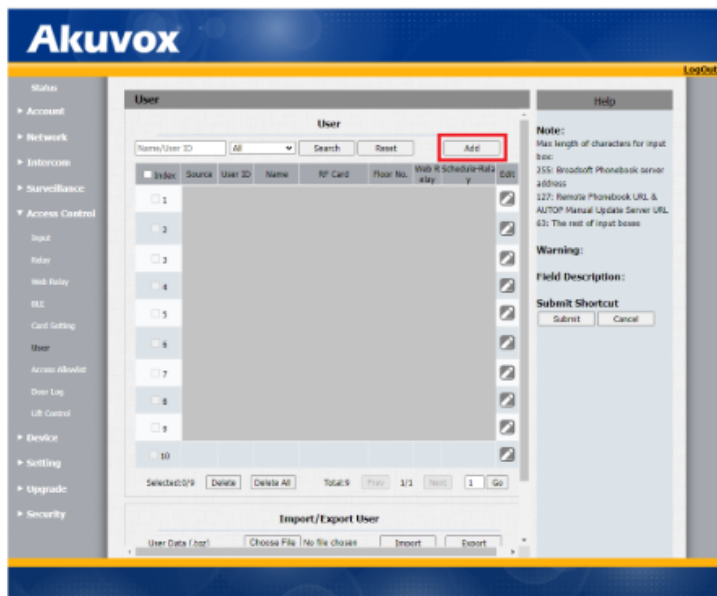

Click the Obtain and Swipe the card

User

User Basic

User ID

1

Name

Role

General User

RF Card

Code

Obtain

+Add

Access Setting

Relay

☒ Relay

Web Relay

0

Floor No.

None

All Schedules

1001:Always

1002:Never

Enable Schedules

1001:Always

>>

<<

Submit

Back to list

Click this button for more resources



**Back to Global Visions
Akuvox Knowledge Base**

