


If customer ask for local bell or an indicator like a strobe, you can connect it to C313 (or other monitors).

Wiring Diagram;

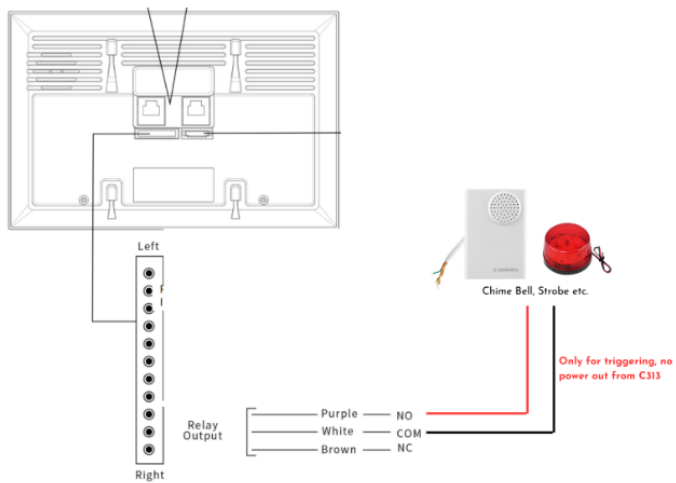

Programming;

After you've entered the monitor web interface follow,

Device > Relay and change the **Relay Type** to **Chime Bell**.

Akuvox
Open A Smart World

LogOut

Relay

Relay Setting

Local Relay

DTMF: #

Hold Delay: 3s

Relay Type: Open Door

Remote Relay

DTMF: #

DTMF1 Code: #

DTMF2 Code: #

DTMF3 Code: #

Note

Max 1 input 255: 1 serve 127: 1 & AU Serve 63: T Warr Field

Click this button for more resources



**Back to Global Visions
Akuvox Knowledge Base**

