

There is a reset button back of the machine,

1. Unplug the device
2. When reset button pressed replugged the device and keep the button pressed until you hear a beep beep.

Click this button for more resources



**Back to Global Visions
Akuvox Knowledge Base**

