

You can power up the R20K and press Call button, and short-circuit the Input A (DOORA- GND) simultaneously.

Keep pressing around 15 seconds until the LED flashes green/red/white light, the R20K will enter to reset mode.



Click this button for more resources



**Back to Global Visions
Akuvox Knowledge Base**

