


Akuvox: Recommended RTSP Settings for Single Button Doorbell (R20A)

There are two different method to set the RTSP settings. First one is from web interface, second one is from Akuvox Cloud. If your device/s is/are on Cloud choose the second method for easy setup.

Setup on Web Interface

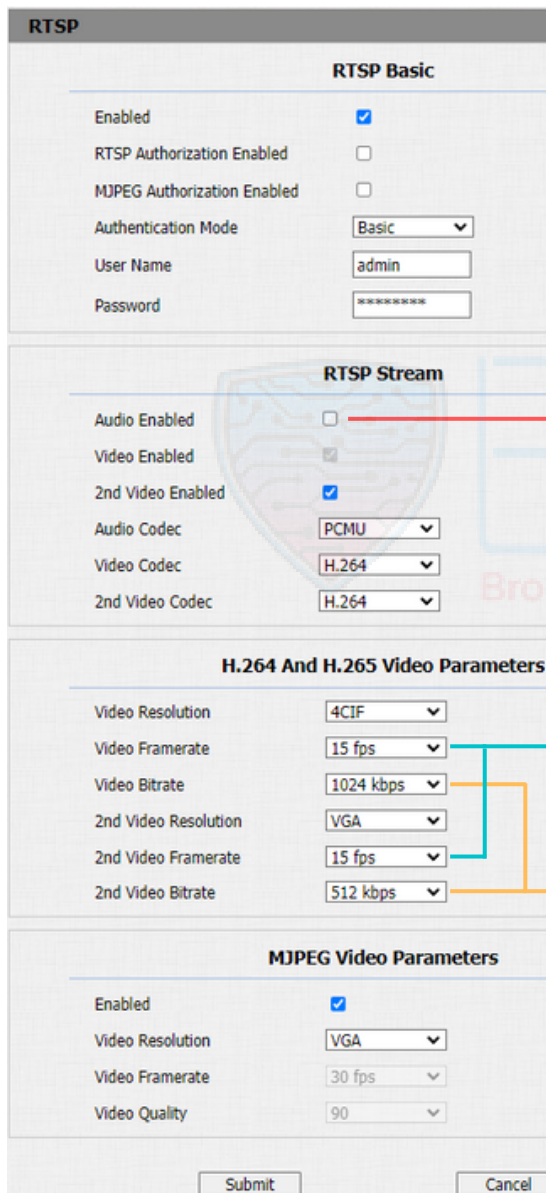

Disable the RTSP Audio.




This will prevent indoor stations from hearing the doorbell prior to the call being picked up, or during monitors. In Some scenario, it will also disable echo feedbacks AFTER a call has been picked up.

***If you need having audio recording on the NVR you should keep it Enabled (not recommended)*

Set the Video Framerate to "15 fps"

Set the Video Bitrate to "1024 kbps"
Set the 2nd Video Bitrate to "512 kbps"

Setup on Cloud with AutoP

- Go to ucloud.akuvox.com/manage and log in with your installer account credential,
- Select the appropriate Role that your device project is under. (Single-Tenant for this scenario),
- Click on User module,
- Click on  of the device selected,
- Click on  , then click on 

- Paste in this command

Config.DoorSetting.RTSP.Enable = 1

Config.DoorSetting.RTSP.Audio = 0

Config.DoorSetting.RTSP.AudioCodec = 0

Config.DoorSetting.RTSP.Video = 1

Config.DoorSetting.RTSP.VideoCodec = 3

Config.DoorSetting.RTSP.H264Resolution = 5

Config.DoorSetting.RTSP.H264FrameRate = 15

Config.DoorSetting.RTSP.H264BitRate = 1024


Config.DoorSetting.RTSP.Video2 = 1

Config.DoorSetting.RTSP.H264Resolution2 = 3

Config.DoorSetting.RTSP.H264FrameRate2 = 15

Config.DoorSetting.RTSP.H264BitRate2 = 512

Do not copy that line if you've C313 as indoor monitor in project

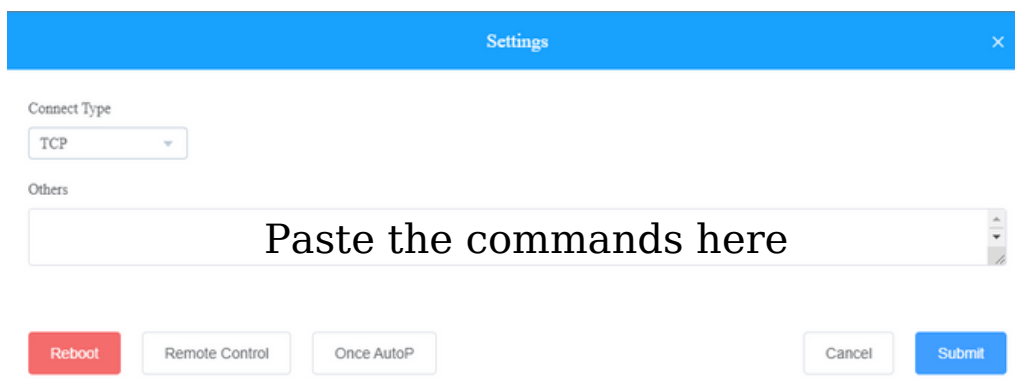

The screenshot shows a 'Settings' window with a blue header. Below the header, there is a 'Connect Type' dropdown menu set to 'TCP'. Underneath, there is a section labeled 'Others' containing a large text input field with the placeholder text 'Paste the commands here'. At the bottom of the window, there are five buttons: 'Reboot' (red), 'Remote Control' (grey), 'Once AutoP' (grey), 'Cancel' (grey), and 'Submit' (blue).

- Click on the button labeled “Once AutoP”
- Reboot the unit

Click this button for more resources



**Back to Global Visions
Akuvox Knowledge Base**

