

## Scheduling DND in C317

To schedule DND login to the device via web GUI. Go to Phone> Call Feature. You will find a option “Schedule” under DND, enable it and specify start and end time.

**Akuvox**  
Open A Smart World

C317

LogOut

Status

Account

Network

Phone

Time/Lang

Call Feature

Display Setting

Audio

Key/Display

Multicast

Logo

Monitor

Intercom

Phone-Call Feature

**Forward Transfer**

Always Forward Disabled Target Number

Busy Forward Disabled Target Number

No Answer Forward Disabled No Answer Ring Time 30

Target Number

**DND**

Whole Day Disabled Return Code When ... 486(Busy Here)

Schedule Enabled DND Start Time 00:00

DND End Time 00:00 Next Day

**Intercom**

Active Enabled Intercom Mute Disabled

Intercom Preview Disabled

**Remote Control**

Allowed Access IP List

**Audio Call Setting**

Receive Live Stream Disabled

**Others**

Help

Note:

Max length of characters for input box:

255: Broadsoft Phonebook server address

127: Remote Phonebook URL & AUTOP Manual Update Server URL

63: The rest of input boxes

Warning:

Field Description:

Submit Shortcut

Submit

Cancel

Click this button for more resources



**Back to Global Visions  
Akuvox Knowledge Base**

