

Akuvox: How to Setup Chimebell


1. When we need Chimebell feature?

If customer don't have an indoor monitor and customer ask for local bell or customer wants external bell, you can use this feature.

2. How can we activate Chimebell feature?


After you've entered the doorphone web interface follow,

Intercom -> Basic -> Trigger Relay by Push Button

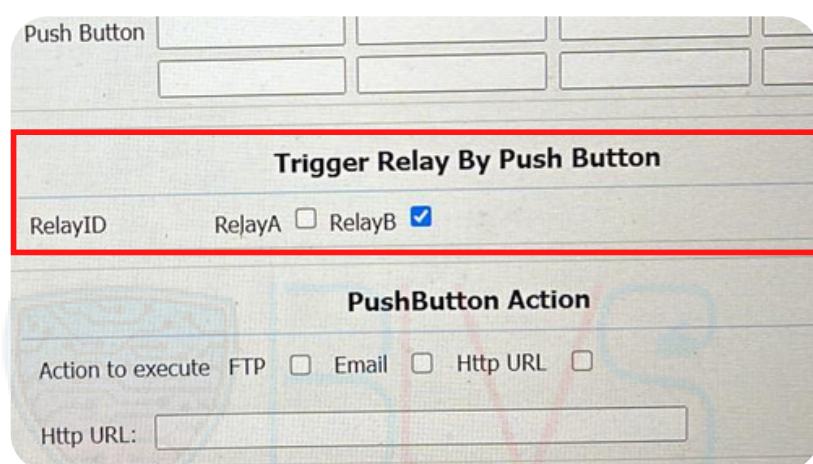

Please select the correct Relay which you've use for external bell.

3. How can we connect external bell to device?

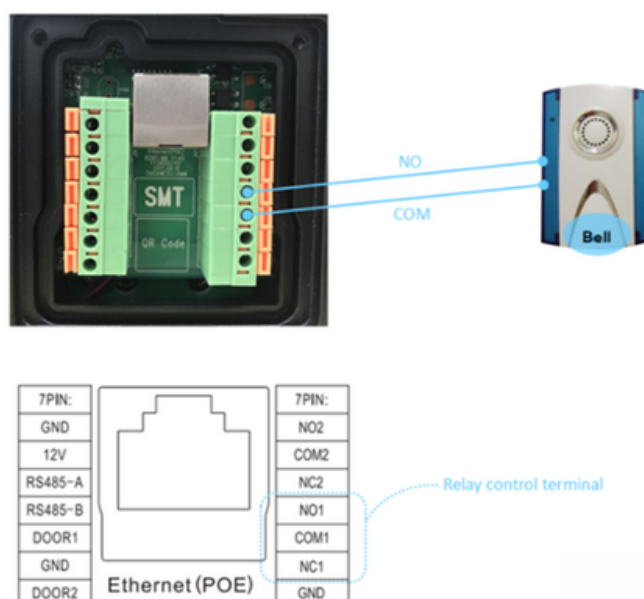

Click this button for more resources



**Back to Global Visions
Akuvox Knowledge Base**

