
Here you will find the setting to disable the automatic LED feature activated by motion on various models. Each model has a slightly different LED setup, and therefore slightly different LED settings.


Log into your device in your normal web browser using the device's IPv4 address.

In most cases you can find the motion setting under the Intercom tab under LED Setting. In some models the location is different, but has the same function.


Please find your model for the LED setting that matches in your case:

#### R<sub>20</sub>A

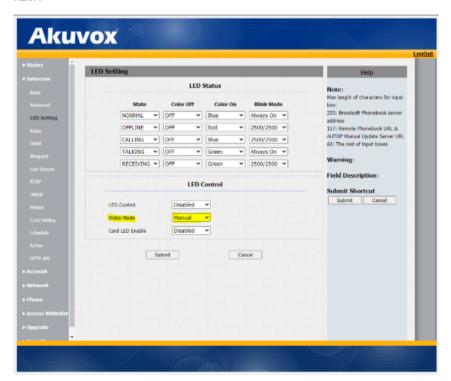


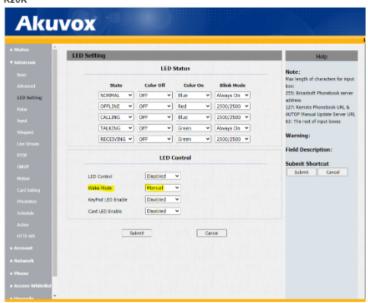


#### R27A/R28A

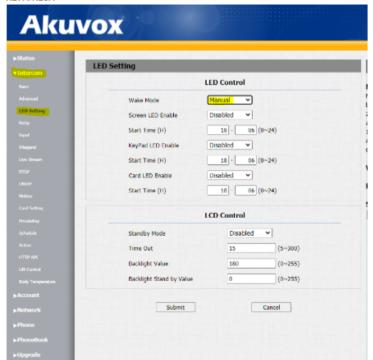

### R29/X916

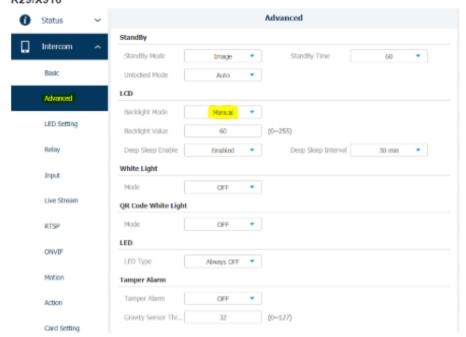

## X915

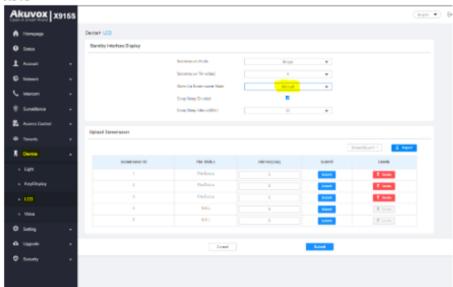

Click this button for more resources



# Back to Global Visions Akuvox Knowledge Base

