


Akuvox: How to Use AutoP Commands

If your device/s is/are on Cloud you can change and make settings on your Installer interface with AutoP Commands. Almost every settings can be done with AutoP commands.


Go to ucloud.akuvox.com/manage and log in with your installer account credential, Select the appropriate Role that your device project is under (Single-Tenant/Community Manager),

Single Tenant Role

- Click on User module,

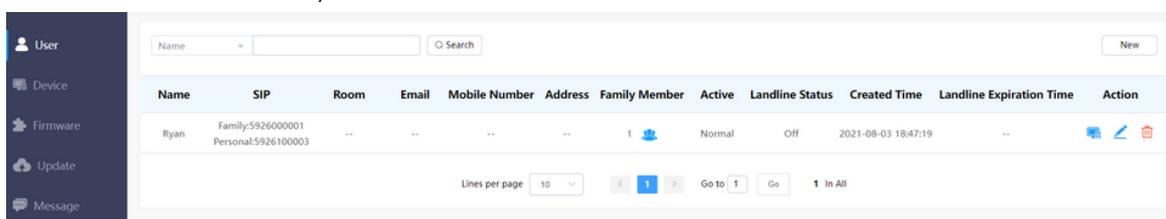

- Click on  of the selected user,
- Click on  of the selected device, then click on 

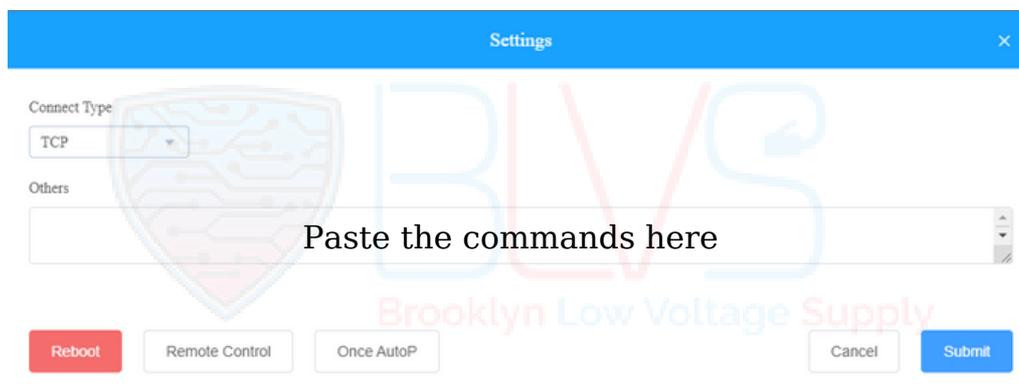


- Paste in the commands then click "Submit".
- Reboot the unit

Multi Tenant Role (Project Manager)



Name	Device Count	End User Count	Property Managers	Action
[Redacted]	6	3	[Redacted]	[Check] [Edit] [Delete]
[Redacted]	5	19	[Redacted]	[Check] [Edit] [Delete]
[Redacted]	12	5	[Redacted]	[Check] [Edit] [Delete]
[Redacted]	37	3	[Redacted]	[Check] [Edit] [Delete]
[Redacted]	3	1	[Redacted]	[Check] [Edit] [Delete]

- Click on ⓘ of the selected Property (Community),
- Click on **Devices**
- Click on ⓘ of the selected device, then click on **Settings**

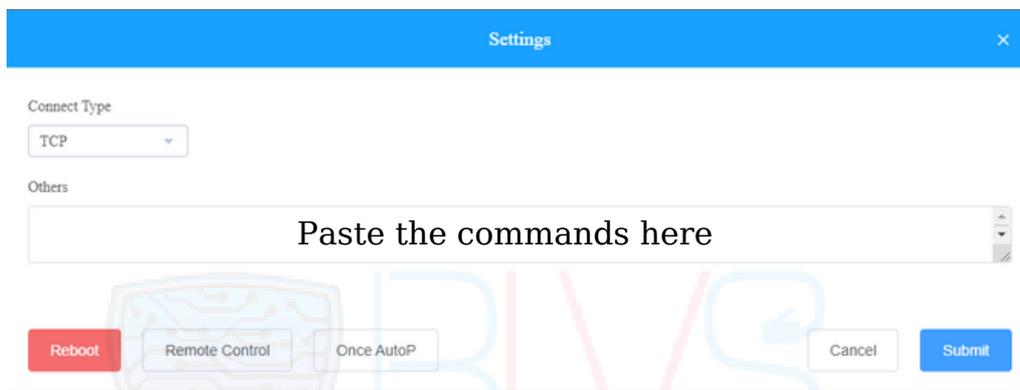

- Paste in the commands then click "Submit".
- Reboot the unit

All available command list:



Click this button for more resources



**Back to Global Visions
Akuvox Knowledge Base**

