


Akuvox: How to Create a Public Key on R20K Keypad (No WebGUI)

***{ADMINPIN}#{NEWPUBLICPIN}🔔**

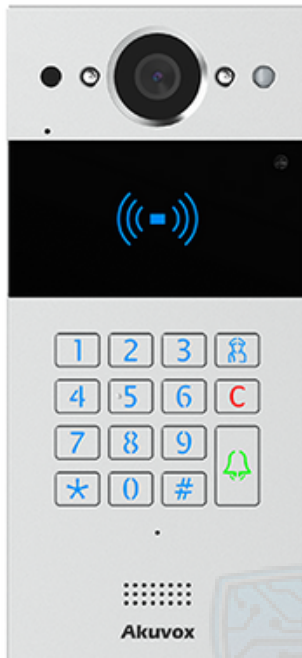

① Dial *3888# (Admin PIN by default)



Then device will say please enter new PIN and end with bell button.

②

Enter the new Public Key you want then press bell button



Then device will say "New key saved."

Click this button for more resources



**Back to Global Visions
Akuvox Knowledge Base**

